




Aircare Dispenser

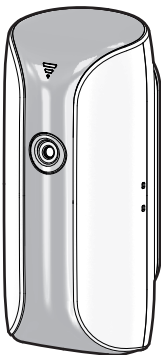


1

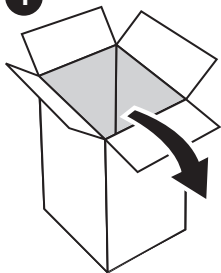


2

EN: Ensure air flow is moving away from the dispenser before installation and do not install where it will be exposed to long periods of direct sunlight.

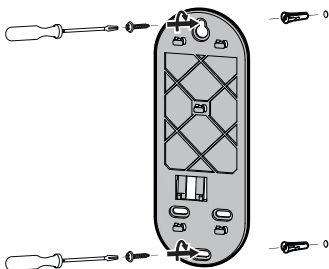



WEAR EYE PROTECTION






3

BATTERY REQUIREMENTS:


Energizer Industrial EN95 D (LR20)
 Procell Intense D (LR20) PX1300
 Panasonic Powerline D (LR20AD)
 Rayovac Fusion D (LR20) 813FUS


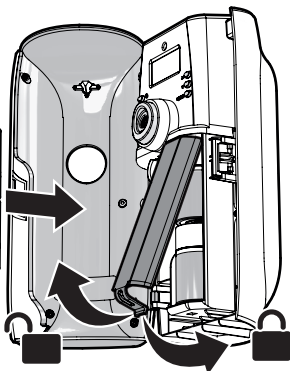



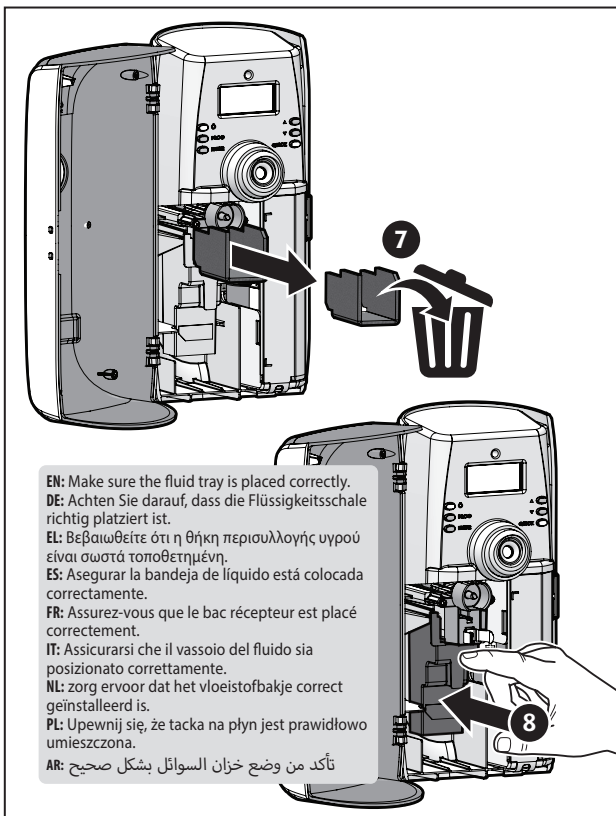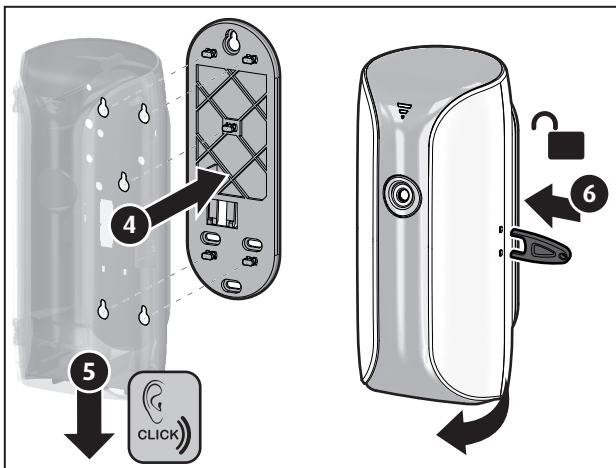

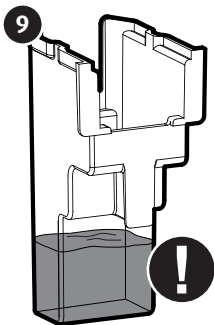


EN: Empty fluid tray.
DE: Flüssigkeitsschale entleeren.
EL: Αδειάστε το δίσκο περισυλλογής.
ES: Vaciar la bandeja de fluido.
FR: Videz le plateau du fluid.
IT: Svuotare il vassoio fluido.
NL: Giet de vloeistofbak leeg.
PL: Opróżnij tacę na płyn.
AR: دَرِّج تَفْرِيفِغ السَّائِل

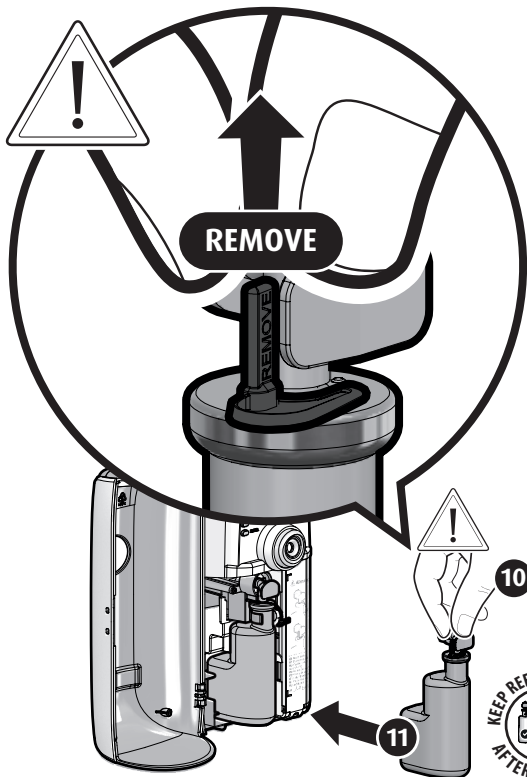

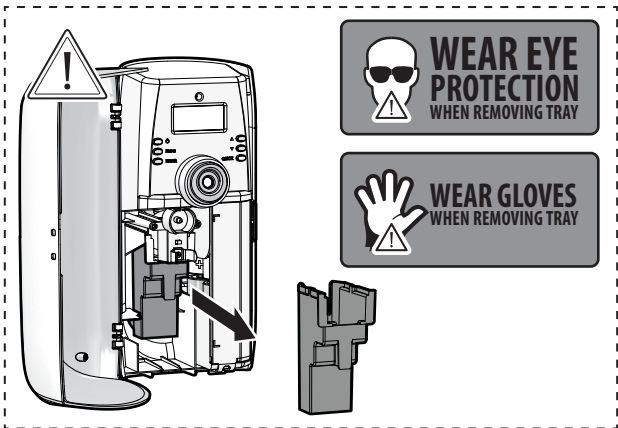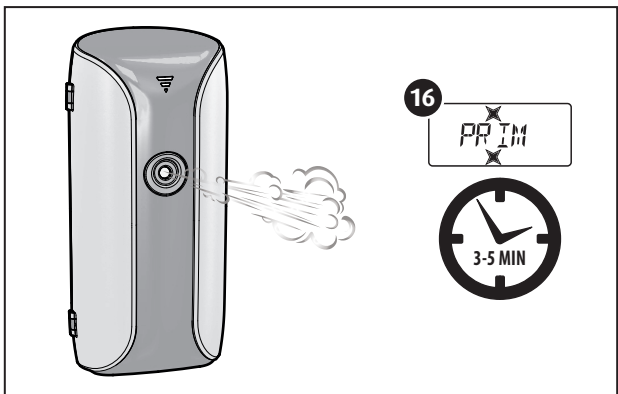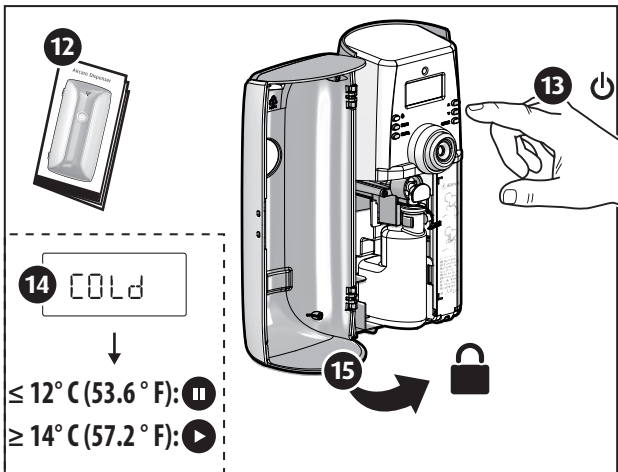


INSTALLATION INSTRUCTIONS

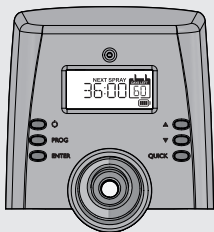

- Power button** 
(turns unit on)
- PROG button**
(adjust programming)
- ENTER button**
(accepts chosen option)
- Adjust buttons**  
(scrolls through options)
- QUICK button**
(switches unit to quick mode)

1. Insert 4 x D-Cell batteries (not included). Install the refill into the dispenser as shown. Press the power button .

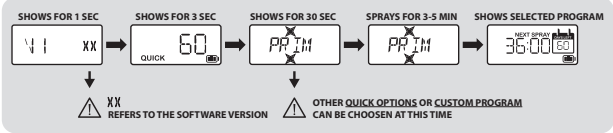

2. Press “**QUICK**” button for available options.
30, 45, 60 or 90 day options can be selected (Default **60**).
After the **QUICK** option is selected the dispenser will prime itself (PRIM) by spraying continuously for 3-5 minutes and once complete the ‘Next Spray’ countdown will be shown. **QUICK** mode can be selected at any time to override any previous program options.




QUICK Adjust Option:
30, 45, **60**, 90

QUICK	REFILLS PER YEAR	SETTINGS
30	12	Time/Days = 24/7 IPE/Refill Alarm icon = OFF Days Left icon /Battery icon = ON
45	8	
60	6	
90	4	

HOW TO PROGRAM

1. Insert 4 x D-Cell batteries.
2. Install the refill into the dispenser as shown. Press the power button .



3. For custom program press **PROG** button. Follow program sequence using adjust buttons   to scroll through options and **ENTER** button to confirm options selected.

✱ Indicates

✱ Flashing/Blinks

△ Press "PROG" button to go back to the previous section when in program setup.

- 1 Press the power button . Press PROG button. Unit is in default settings (Default **6** refills per year).



Adjust Option:
12, 8, **6**, 4

ENTER

- 2 Set the day of week (Default **Mo**).



Adjust Option:
Mo, Tu, We, Th, Fr, Sa, Su

ENTER

- 3 Set Time Now - 24Hr Clock (Default **08:00**).



Adjust Option:
00 - 23

ENTER



Adjust Option:
10 Minutes
00, 10, 20, 30, 40, 50

ENTER



Adjust Option:
Single Minutes
0, 1, 2, 3, 4, 5, 6, 7, 8, 9

ENTER

- 4 Set days of operation (Default **7**). If 7 is selected go straight to step 5.



Adjust Option:
5, 6, **7**

ENTER

Select days off, 1-2.



Adjust Option:
Mo, Tu, We, Th, Fr, Sa, Su

ENTER

5 Set Start Time - 24Hr Clock (Default 00:00). Hrs.



Adjust Option:
00 - 23

ENTER

6 Set Stop Time - 24Hr Clock (Default 00:00) Hrs.



Adjust Option:
00 - 23

ENTER

7 Set IPE if required (Default OFF). IPE is a set of four consecutives sprays with an interval of 150 seconds. IPE provides increased fragrance to coincide with known periods of heavy use. If IPE is selected OFF go to step 8. If ON is selected go to step 7a.



Adjust Option:
OFF, ON

ENTER

7a Set Start Time - 24Hr Clock (Default 08:00).



Adjust Option:
00 - 23

ENTER



Adjust Option:
10 Minutes
00, 10, 20, 30, 40, 50

ENTER



Adjust Option:
Single Minutes
0, 1, 2, 3, 4, 5, 6, 7, 8, 9

ENTER

8 Days Left icon (Default ON).



Adjust Option:
OFF, ON

ENTER

9 Battery icon (Default ON). When battery is low the red light will double blink red every 4 seconds.



Adjust Option:
OFF, ON

ENTER

10 Refill Alarm icon (Default OFF).



Adjust Option:
OFF, ON

ENTER

11 When programming is complete LCD screen will scroll through all options selected. To review selected options press and hold PROG button for 5 seconds.

12 The dispenser will then prime itself by spraying continuously for the next 3-5 minutes and once the 'PRIM' finishes the selected program will be shown.



IMPORTANT:

- ⚠ Only Energizer Industrial EN95 D (LR20), Procell Intense D (LR20) PX1300, Panasonic Powerline D (LR20AD) or Rayovac Fusion D (LR20) 813FUS batteries are approved for use in the device.
 - ⚠ Empty fluid tray after every refill change.
 - ⚠ Wear eye protection and gloves when removing and emptying tray.
 - ⚠ When a new refill is inserted into the dispenser it will prime (PRIM) by spraying continuously for 3-5 minutes.
 - ⚠ Once program setup and priming is completed, pressing ENTER will perform a test spray.
 - ⚠ The light blinks **blue** for 5 seconds before **next spray**.
 - ⚠ The light blinks **red** twice every 5 seconds when the **batteries** are running low.
 - ⚠ The light blinks **red** twice every 5 seconds when is too **cold** and the dispenser is paused.
 - ⚠ The light blinks **orange** twice for 5 seconds when the **refill** is running low.
 - 30-Day Setting = Starts to blink at day 27.
 - 45-Day Setting = Starts to blink at day 42.
 - 60-Day Setting = Starts to blink at day 54.
 - 90-Day Setting = Starts to blink at day 81.
 - Resets when new refill installed. Default Setting is "On".
- Press and hold [UP] for 5sec to enable/disable the LED status.
- Orange LED blinks twice to indicate enable LED status.
 - Orange LED blinks once to indicate disable LED status.
- ⚠ When the screen displays **COLD** the dispenser will not work until it reaches 14 °C (57.2 °F).
 - ⚠ Replacing an empty refill with a new one automatically resets the 'DAYS LEFT' counter.
 - ⚠ Refill plug **MUST** be removed before inserting the refill into the dispenser.

IMPORTANT:

- ⚠ Keep refill upright after opening.
- ⚠ You **MUST** only install a refill into the dispenser when it is in an upright position. Once the dispenser has an installed cartridge it **MUST** be kept in an upright position **AT ALL TIMES**.
- ⚠ When a refill is inserted into the dispenser the internal seal is pierced. Therefore care should be taken when removing a used refill as any residual fluid may leak from the seal interface.
- ⚠ **DO NOT** install or use this dispenser directly above polished, painted or plastic surfaces. Product is designed for wall mounting only.

APPENDIX 1, ADDITIONAL SAFETY WARNINGS:

1. Only use non rechargeable 1.5V D-Cell alkaline batteries.
2. Non-rechargeable batteries are not to be recharged.
3. Different types of batteries or new and used batteries are not to be mixed.
4. Batteries are to be inserted with the correct polarity.
5. Exhausted batteries are to be removed from the appliance and safely disposed of.
6. If the appliance is to be stored unused for a long period, the batteries should be removed.
7. The supply terminals are not to be short-circuited.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.
11. Do not expose the appliance or battery to excessive temperatures.
12. Be aware of the risk of terminals of the battery-operated appliance or battery being short-circuited by metal objects.
13. If batteries in a dispenser are leaking, wear gloves, carefully remove them, clean the compartment and dispose of the batteries safely at a recycling point. Never touch the residue directly, and avoid reusing the dispenser until it's fully cleaned and dry.
14. Remove all batteries before disposing of the dispenser.



MODELS: VIBE-PRO-BS / VIBE-PRO-WS / VIBE-PRO-WW
KC Registration number: **R-R-V3C-VIBE-PRO-1**